



JWST NIRCcam Time Series Observations

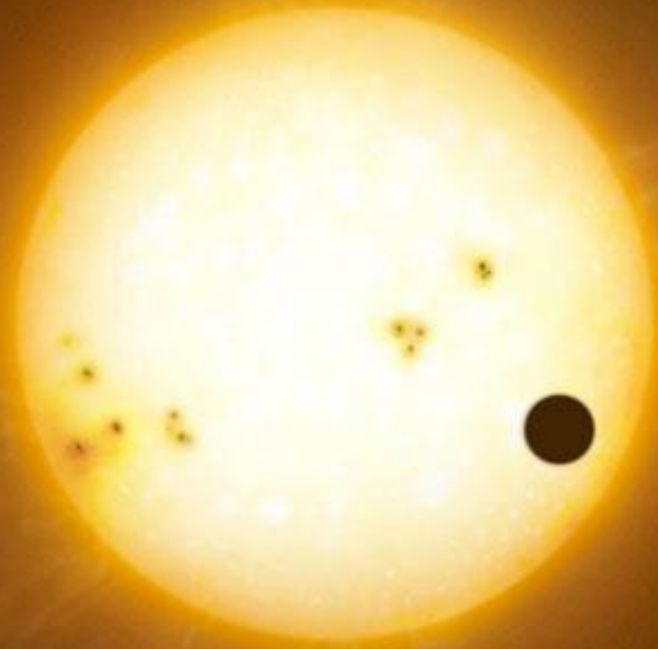

Tom Greene (NASA Ames)
E. Schlawin (UA)
& UA / STScI NIRCcam team:
D. Kelly, J. Stansberry,
J. Leisenring, J. Fraine, et al.

ETEO w/JWST
July 10, 2017

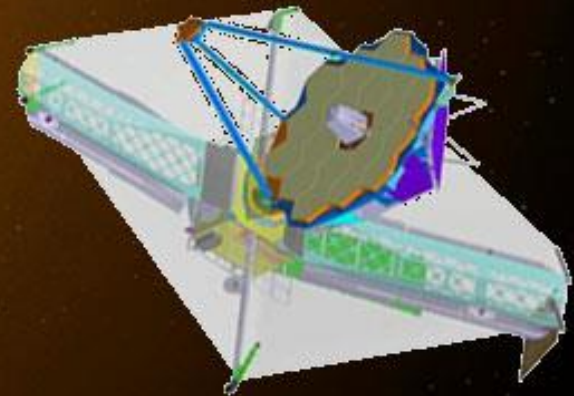

NIRCam Intro (from STScI Jdox)

Introduction

The JWST Near Infrared Camera (NIRCam) observes from 0.6 to 5.0 μm and offers imaging, coronagraphy, and grism slitless spectroscopy. NIRCam has 2 modules pointing to adjacent fields of view. Each module uses a dichroic to observe simultaneously in a short-wavelength channel (0.6–2.3 μm) and a long-wavelength channel (2.4–5.0 μm).

NIRCam has 5 observing modes for science:


- Imaging of two 2.2' \times 2.2' fields separated by 44" covering 9.7 arcmin² in total
- Coronagraphic imaging at multiple wavelengths
- Wide field slitless spectroscopy (2.4–5.0 μm) using grisms with resolving power $R = \lambda/\Delta\lambda \sim 1500$
- Time series imaging (photometric monitoring)
- Grism time series (spectroscopic monitoring)

Focus of this talk

NIRCam will also obtain wavefront sensing measurements used to align and phase JWST's primary mirror.


From <https://jwst-docs.stsci.edu/display/JTI/>

NIRCam Fields of View (from STScI Jdox)

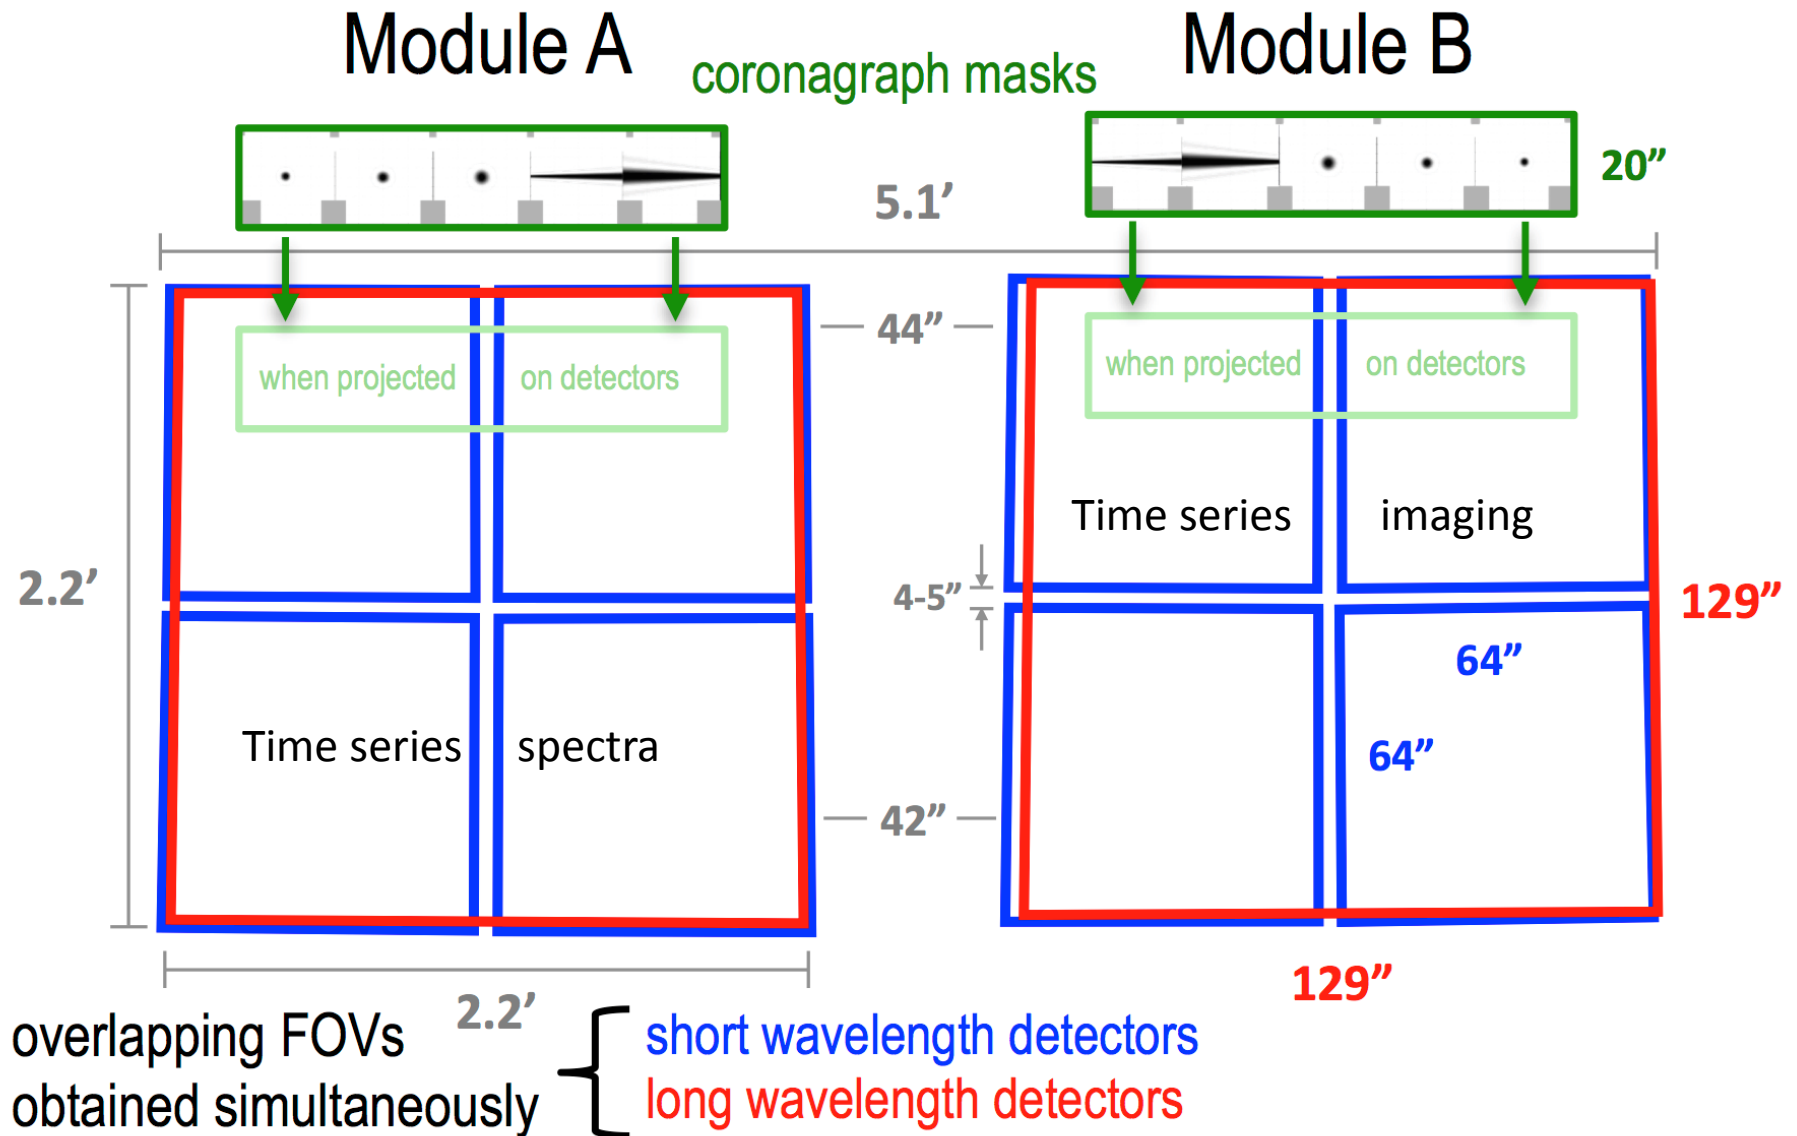


NIRCam modes: selectable with wheels

No Short Wavelength Spectroscopic Capabilities in Cycle 1

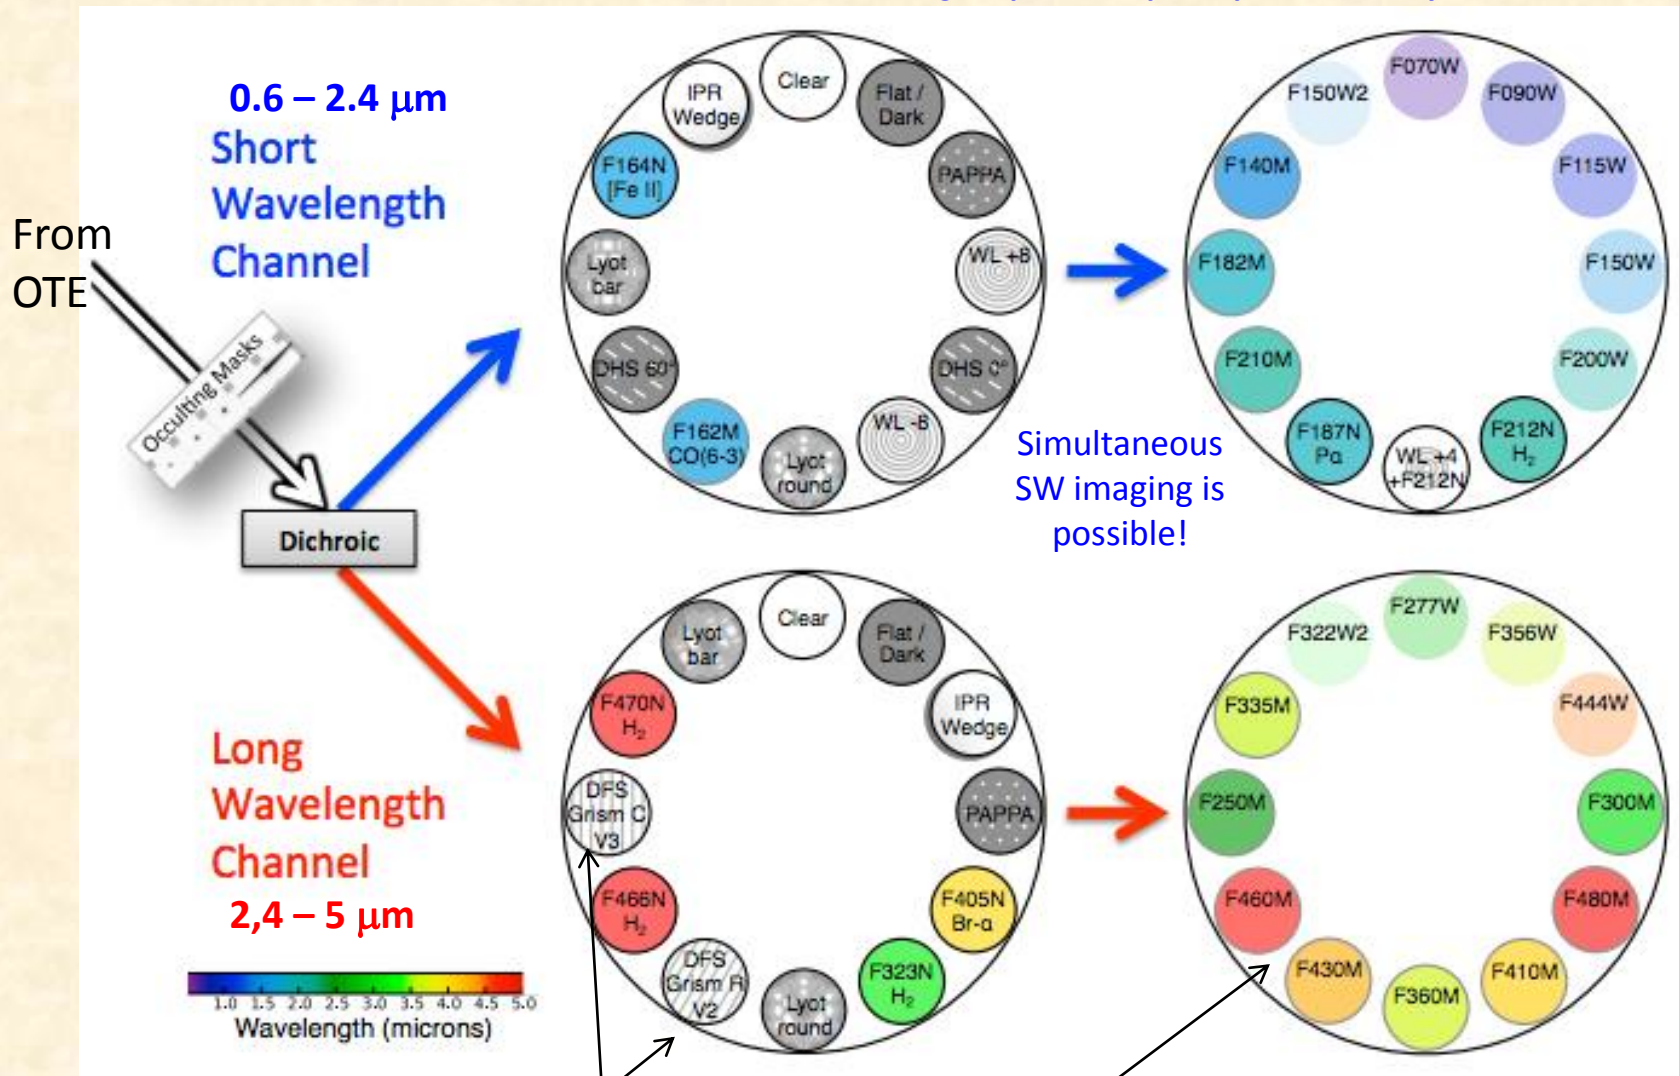


*2 LW grisms in each module provide $R \sim 1500$ slitless spectroscopy:
Chose dispersion orientation and filters to suit your science*

NIRCam LW Grism Spectra

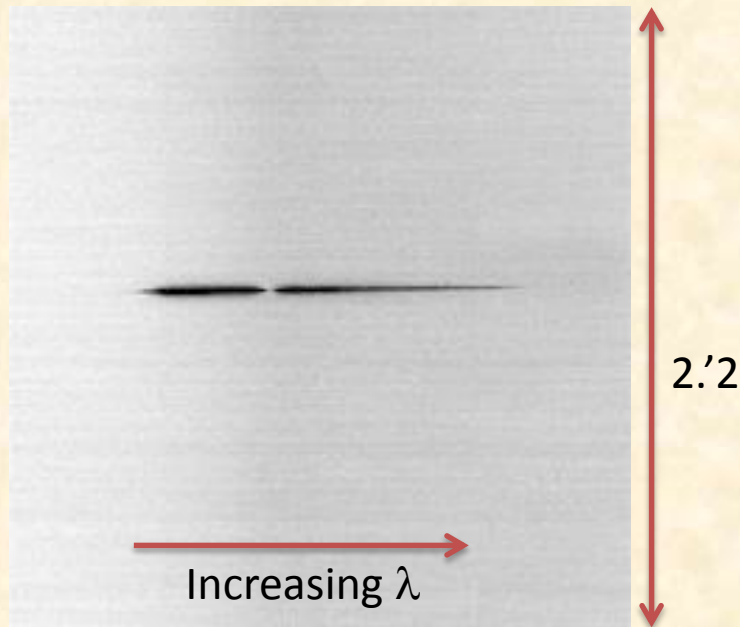

Left: NIRCam spectral image of the OSIM super-continuum lamp point source taken with the LWA R grism and F444W filter during JWST instrument testing.

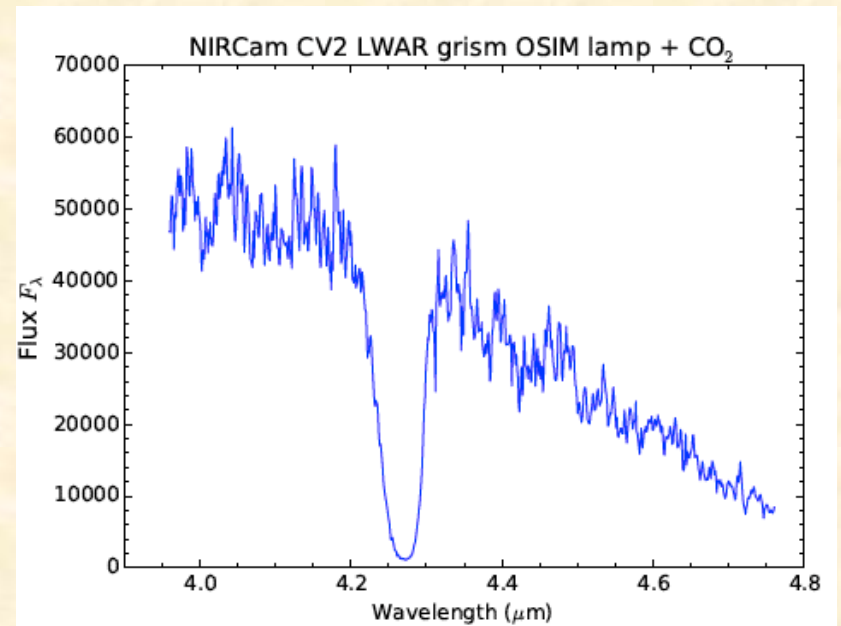

Right: Extracted spectrum. The continuum decreases toward longer wavelengths due to low fiber transmittance, and the broad feature near $4.27 \mu\text{m}$ is due to CO₂ absorption. These are artifacts of the test equipment and not NIRCam itself.

*** NIRCam FOV is $2.2'' \times 2.2''$ with dispersion of 10 \AA per $0.''065 \times 0.''065$ pixel**

NIRCam Spectral Coverage & Resolution

NOTE: Total spectroscopic throughput is the **product** of Grism curve and selected filter!

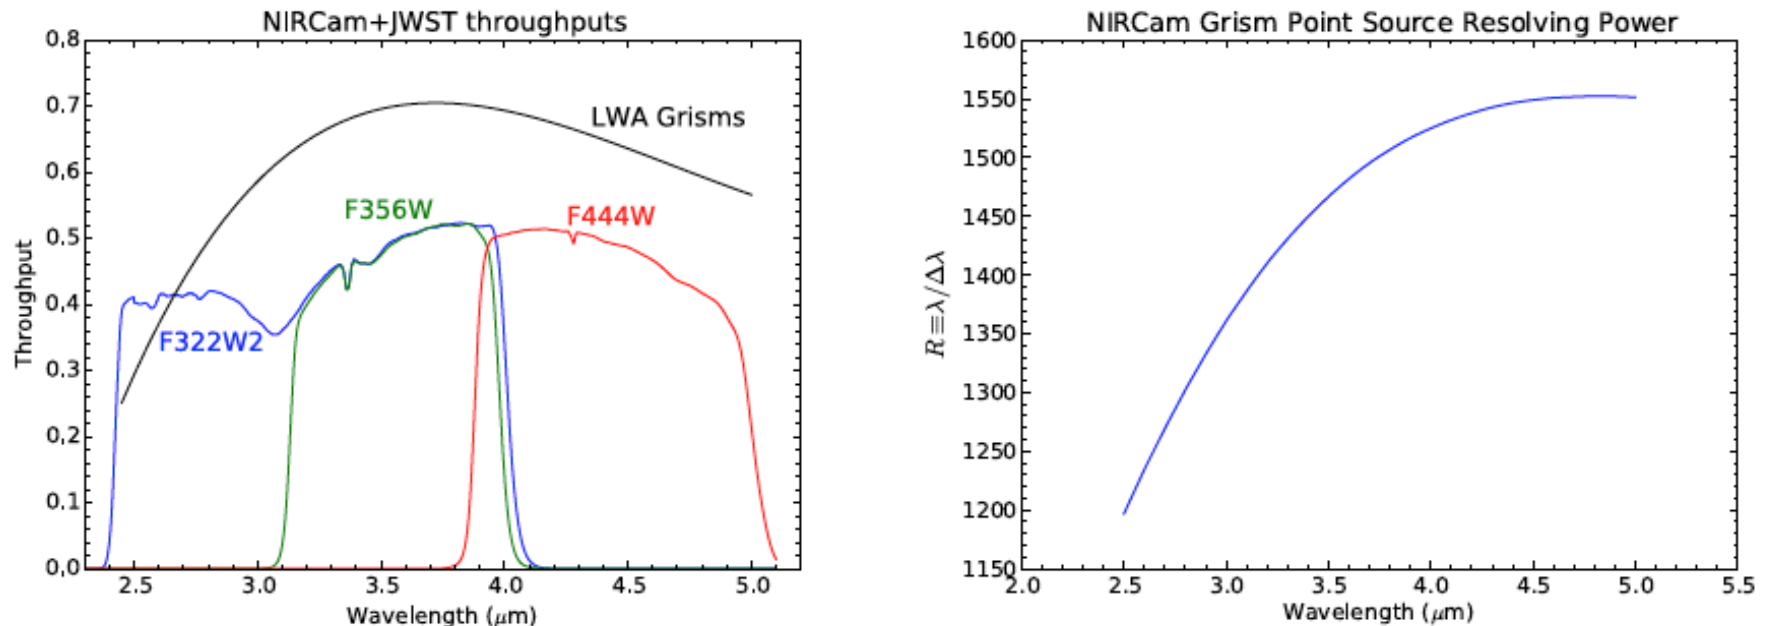


Figure 3. Left: Total system throughput including all OTE and NIRCam optics and the detector quantum efficiency for several NIRCam filters. The theoretical LW grism efficiency curve (shown for the A module) must be multiplied by the filter curves to produce the system throughput at each wavelength. The Module B LW grisms are anti-reflection coated on only 1 side and therefore have throughputs approximately 25% lower than the LWA grisms. Right: Grism FWHM spectral resolving power vs. wavelength for point sources, limited by pixel sampling of the PSF at shorter wavelengths ($\lambda \lesssim 4 \mu\text{m}$) and limited by the circular beam factor⁷ and diffraction at longer wavelengths ($\lambda \gtrsim 4 \mu\text{m}$).

Module A (TSO) Spectral Saturation Values

λ (μm)	K_{sat} (A0V) ^c	K_{sat} (M2V) ^c	Filter ^d
2.5	4.3	4.2	F322W2
2.7	4.4	4.4	F322W2
2.9	4.3	4.3	F322W2
3.1	4.1	4.1	F322W2
3.3	4.1	4.3	F322W2
3.5	4.0	4.2	F322W2
3.7	3.9	4.1	F322W2
3.9	3.7	3.9	F322W2
4.1	3.4	3.7	F444W
4.3	3.1	3.4	F444W
4.5	2.9	3.0	F444W
4.7	2.5	2.7	F444W
4.9	2.1	2.4	F444W

NIRCam can observe
bright stars!

c: K-band Vega magnitudes for saturation (80% full well or 65,000 electrons) for 0.68 s int

See Greene+ (2017) JATIS article for more Module A & B saturations and sensitivity values

Time-series imaging is also possible

- $\lambda < 2.4 \mu\text{m}$ TSO imaging can be done simultaneously with either $\lambda > 2.4 \mu\text{m}$ imaging or spectroscopy
- SW observations can be done with weak lenses for better bright limits and potentially higher precision photometry
- Show HAT-P-18 b APT example???

Setting TSO parameters

- Determine how much dwell time for each object
- Set subarrays and exposure parameters
- Set SW filter: simultaneous $\lambda < 2.4 \mu\text{m}$ imaging
- Consider target acquisition
 - Offset acquisition required for bright targets in Cycle 1
- Visibility, position angles, and spectral overlaps
- Enter values into APT

NIRCam grism time series options (APT)

NIRCam Grism Time Series Special Requirements Comments

Module: A Module can only be set to A for this template.

Subarray: SUBGRISM128

No. of Outputs: 4 Frame readout time is 0.67596

No. of Exposures: 1


Short Pupil+Filter: WLP8+F210M

Long Pupil+Filter: GRISMR+F322W2


	Readout Pattern	No. of Groups	No. of Integrations	Photon Collect Duration	Total Photon Collect Duration
Exposure Time	RAPID	4	1000	2703.84	2703.84

- Can choose from 64, 128, 256, & 2048 x 2048 subarrays
- 1 or 4 outputs (4 for very bright stars)
- Simultaneous short wavelength imaging with weak lens to spread the light over many pixels is possible
- No dithering
- Flexible detector MULTIACCUM exposure & readout parameters

Select Subarray Size

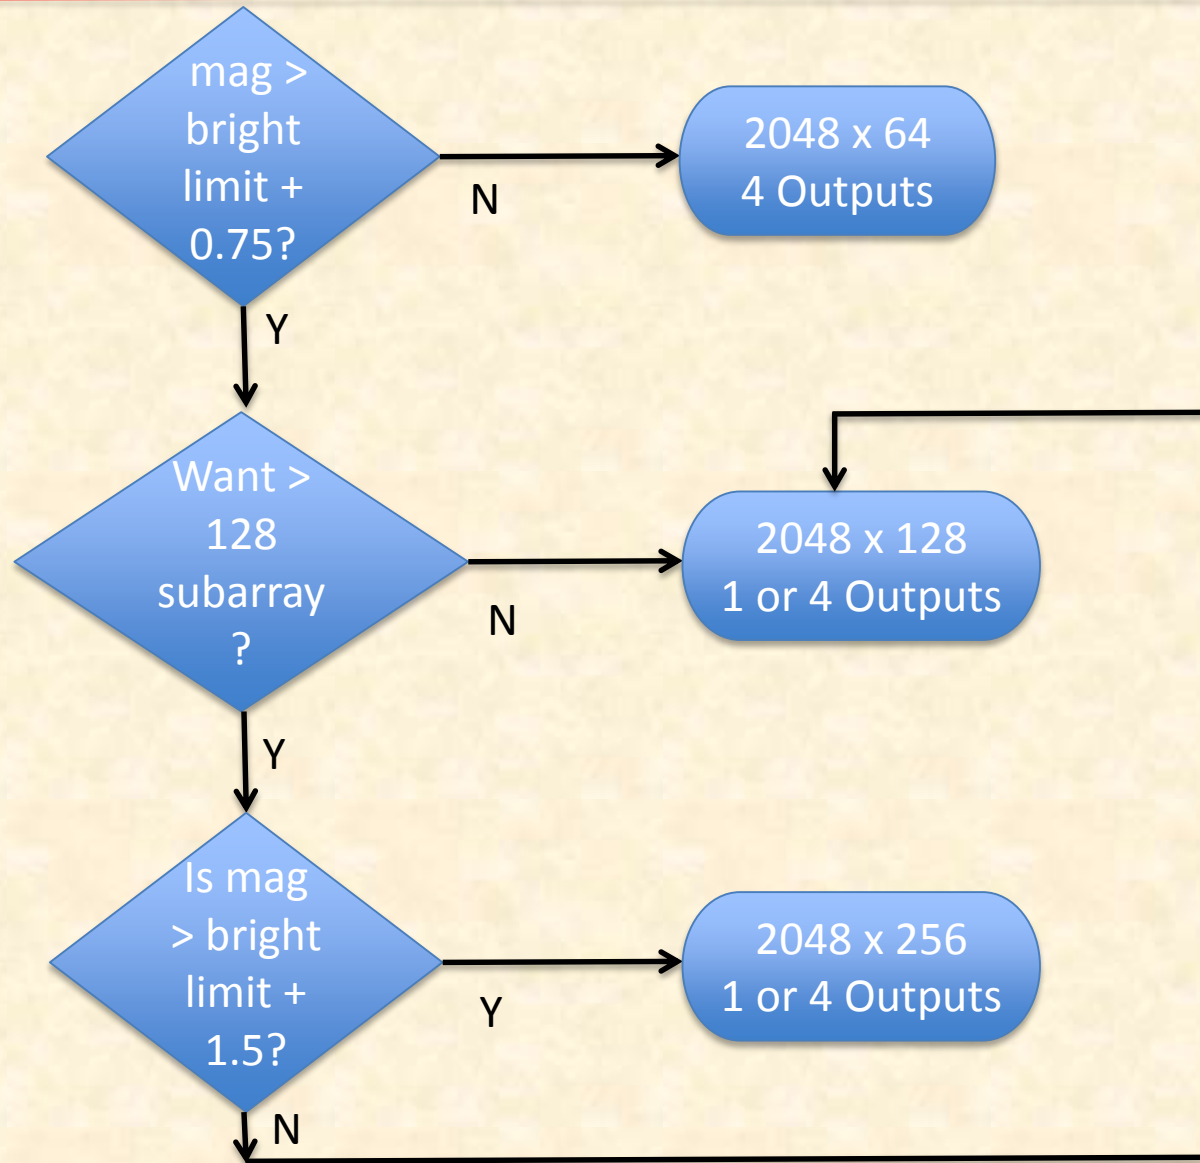

Select Detector Readout Parameters

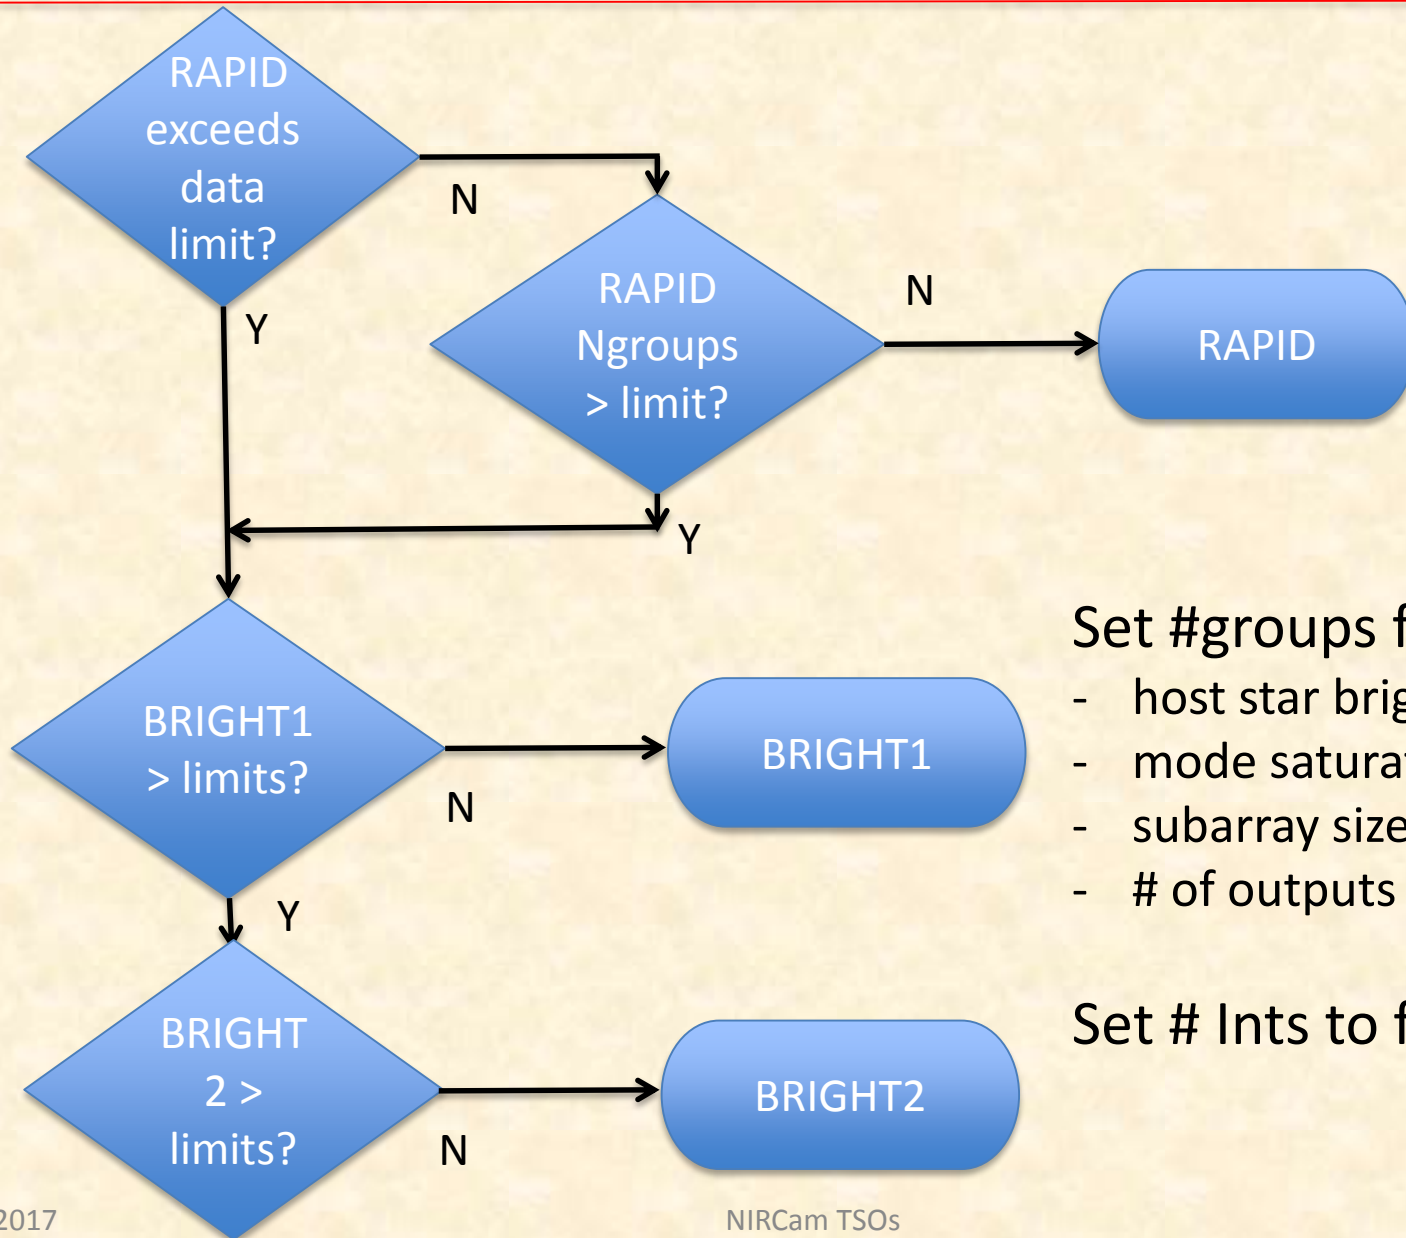


Set #groups from:

- host star brightness
- mode saturation limit
- subarray size
- # of outputs

Set # Ints to fill dwell time

Set SW Filter: Simultaneous $\lambda < 2.4 \mu\text{m}$ Imaging

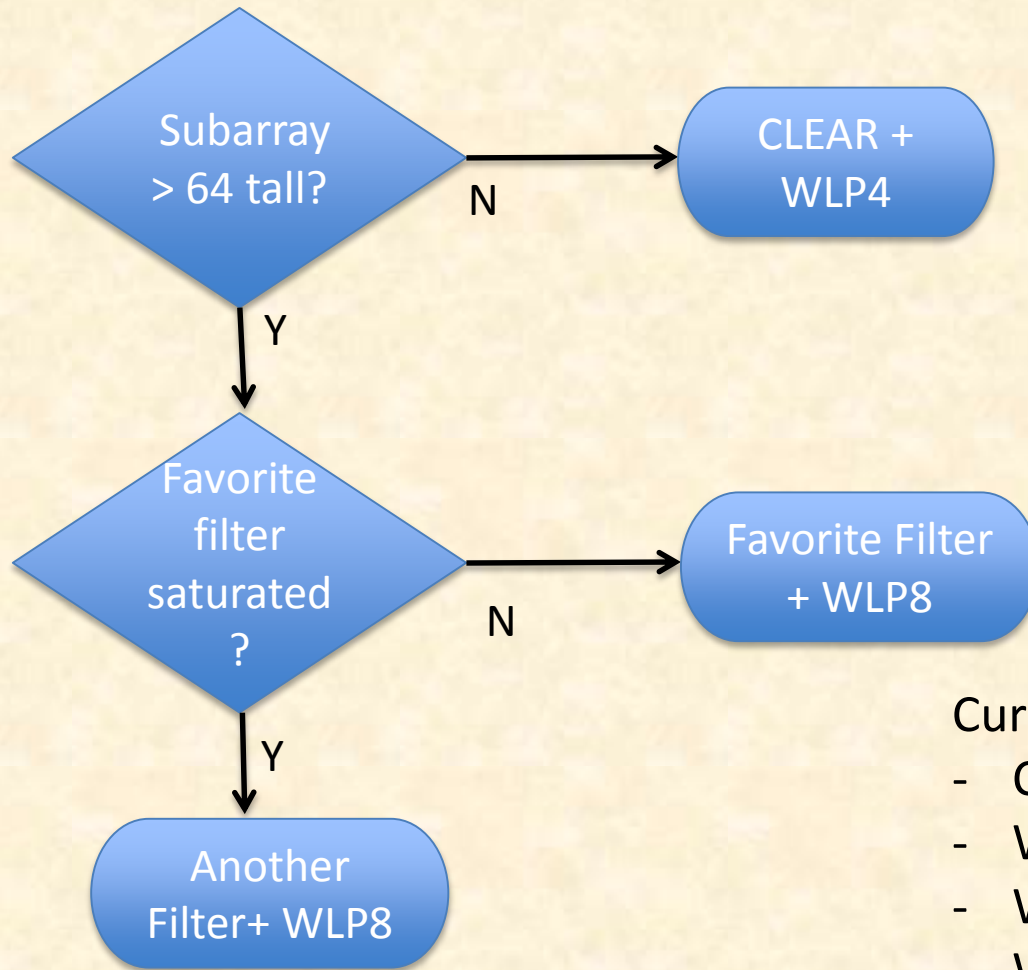



Currently Available SW Filters:

- CLEAR + WLP4
- WLP8 + 182M
- WLP8 + 210M
- WLP8 + 187N
- WLP8 + 212N

Target Acquisition Note

- In Cycle 1, grism time series target acquisition is done with F335M filter, 32 x 32 subarray, and Ngroups ≥ 3
 - Saturation limit is $K = 7.0$ mag
- *Stars with $K < 7.0$ may require offset target acquisition*
 - Offset from nearby fainter star with known coordinates
- Using a narrow-band acquisition filter would allow acquiring on $K < \sim 4.5$ mag stars (likely Cycle 2 and later)

Check spectral overlap of nearby objects

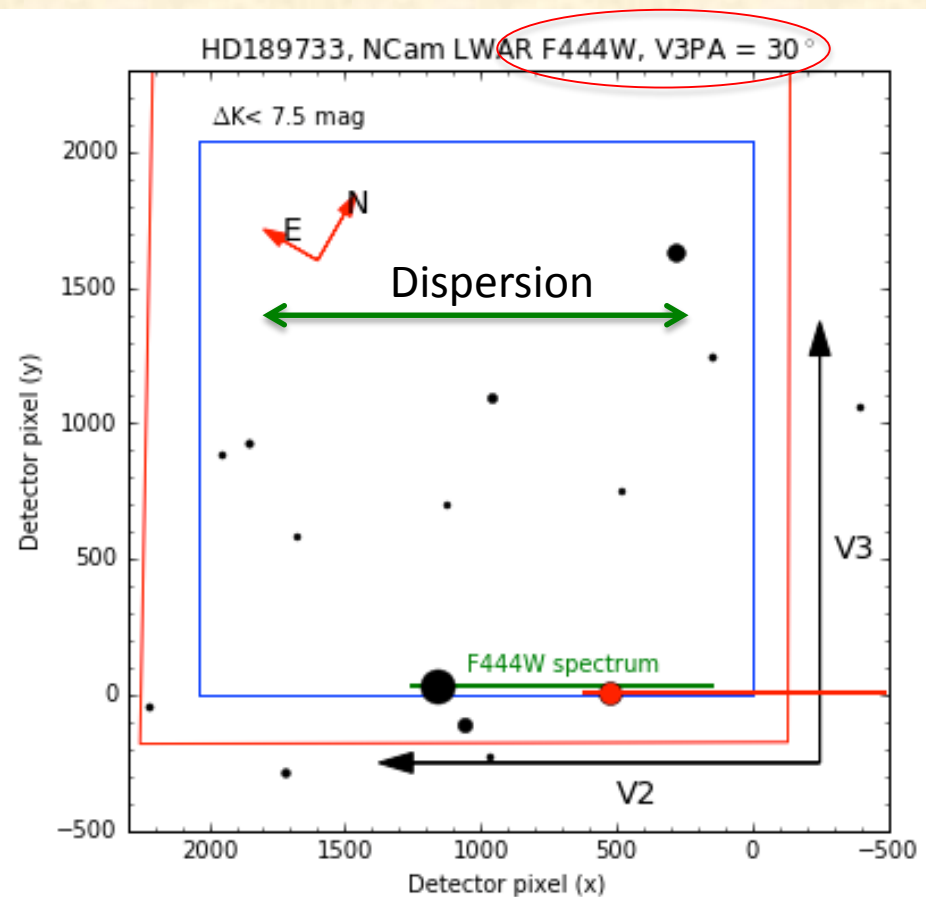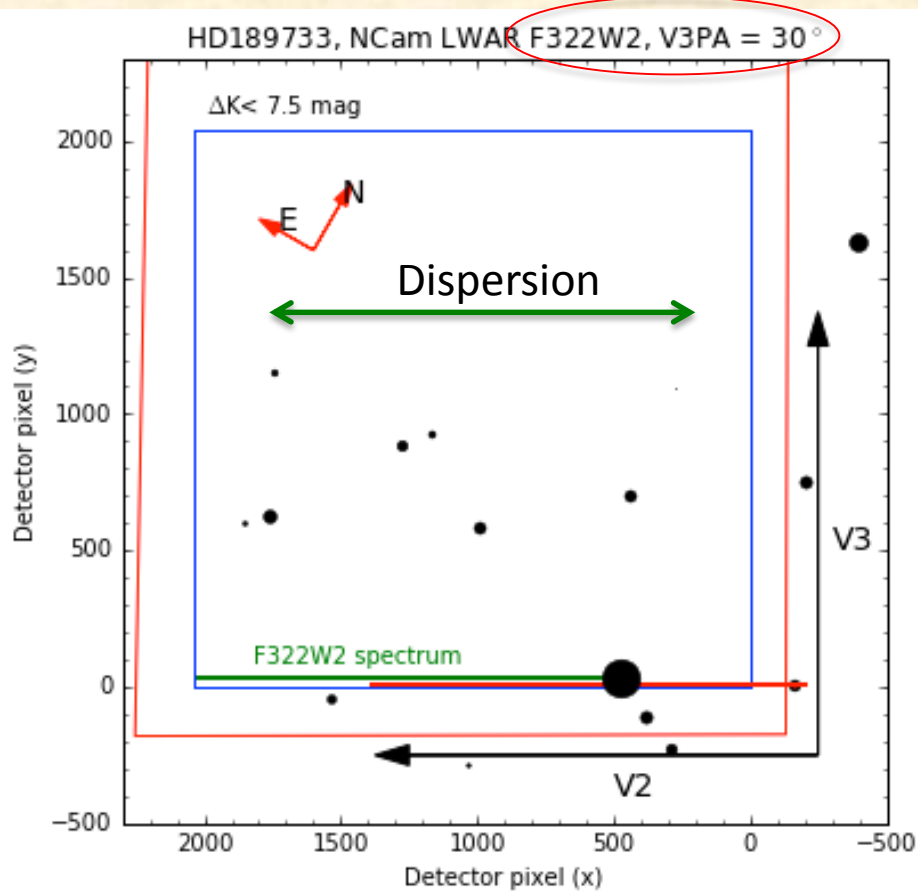

We are working on an automated tool for this (NIRCam + MIRI LRS)

APT Example: WASP-80 b F322W2

Observation 3 of JWST Draft Proposal (NIRCam_GTO_transiting_planets_APT_ES_2015May25.aptx)

Number Status: UNKNOWN

Label

Instrument

Template

Target

Splitting Distance

Number of Visits


Visit Splitting:

Science

Total Charged

Duration (secs)

Data volume: 25,122 MB

 NIRCam Grism Time Series

Special Requirements

Comments

Target Acquisition Parameters

Acq Target

Acq Subarray

Acq Filter

Target ACQ

Acq Readout Pattern Acq Groups/Int

Acq Integrations/Exp Acq Total Integrations Acq Total Exposure Time

Acq Exposure Time

Grism Time Series Parameters

Module can only be set to A for this template.

Subarray

No. of Output Channels

Frame readout time is 1.34668

Exposures/Dith

Short Pupil+Filter


Long Pupil+Filter

Readout Pattern

Groups/Int Integrations/Exp Total Integrations Total Exposure Time


 Exposure Time

NIRCam uses the JWST time-series data pipeline

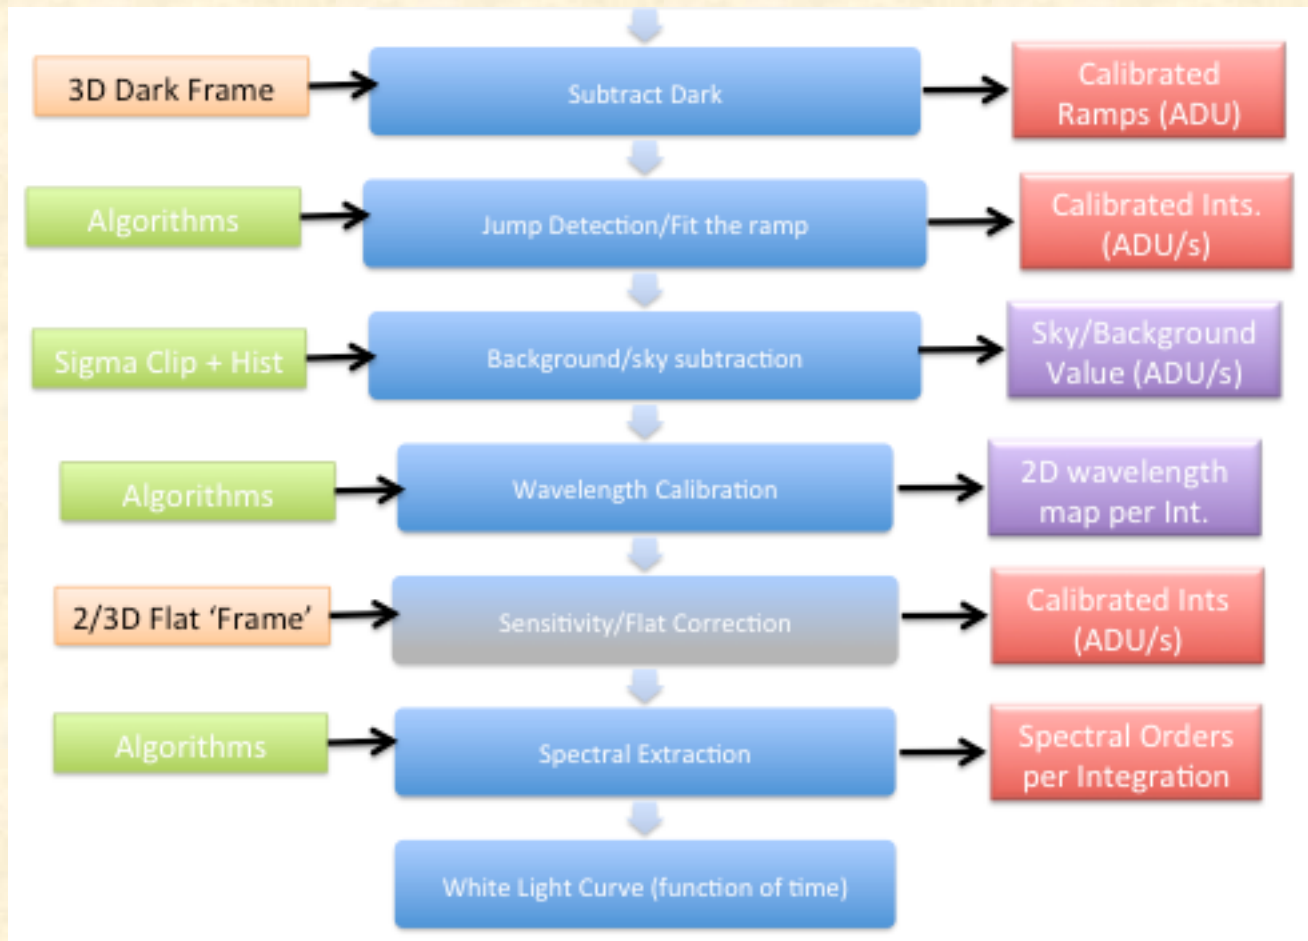

- Users can download & re-run the pipeline with different options, additions, or removals

Future Possible Simultaneous 1 – 2 μm Spectra

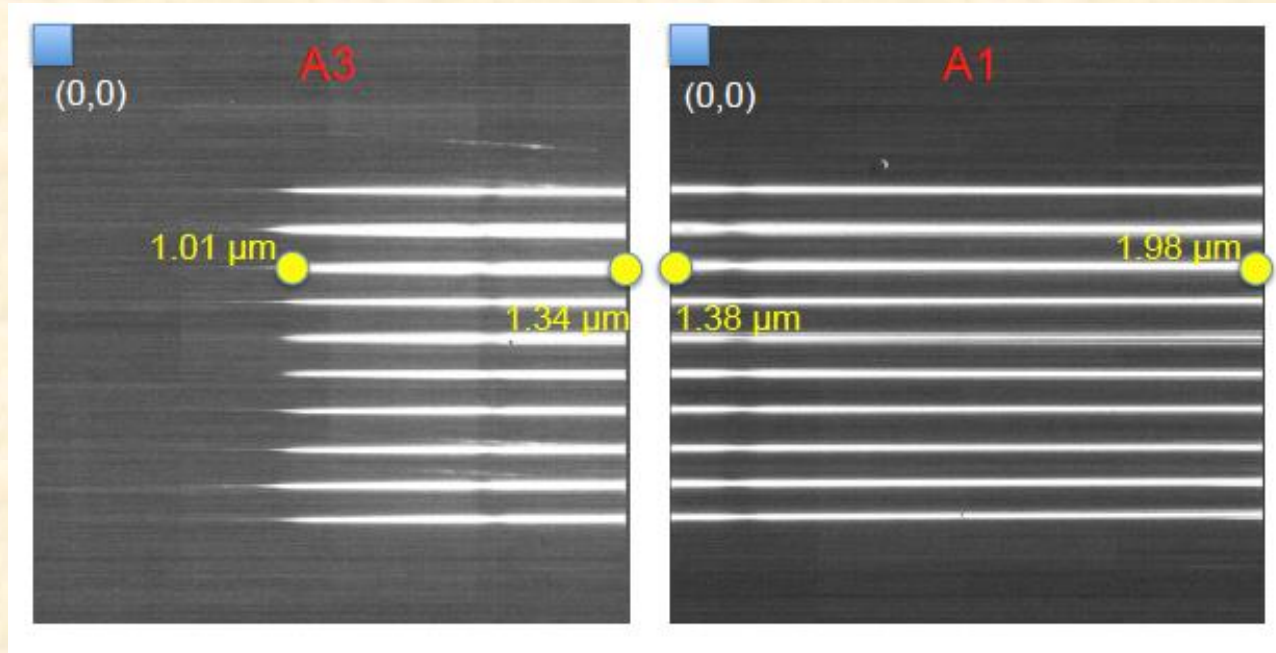

- DHS elements disperse $\sim 40\%$ JWST's light onto 2 NIRCam SW detectors with a small gap in-between

- Dispersed Hartmann Sensor (DHS) elements in the SW channel of NIRCam provide 1 – 2 μm spectra using 10 sub-apertures of the JWST pupil, potentially allowing simultaneous spectra of bright stars during LW grism observations
- This is not an approved science mode for Cycle 1; it may be approved for later cycles. There may be limitations on spectra.

The End